

Overview

Pairing your Nano Cortex with the Cortex Cloud app is a straightforward process that allows you to control and update your device directly from your smartphone or tablet. Once paired via Bluetooth, you can manage your Nano Cortex's settings, [presets](#), Neural Captures, [firmware updates](#), and access other powerful features.

How to pair Your Nano Cortex with the Cortex Cloud app

Step 1: Enable Bluetooth on your smartphone or tablet.

Step 2: Launch the Cortex Cloud app on your smartphone or tablet. The app is available on [iOS](#) and [Android](#) platforms. If you haven't installed it yet, download it from your device's app store.

Step 3: When prompted, grant the Cortex Cloud app permission to access Bluetooth. This allows the app to search for and connect to your Nano Cortex.




Step 4: In the Cortex Cloud app, go to the **'Devices'** menu and tap **Add New**. Your smartphone or tablet will begin searching for nearby Nano Cortex units.



Step 5: To put your Nano Cortex into **Pairing Mode**, press

and hold the **EXIT** and **CAPTURE** buttons simultaneously for 1 second.

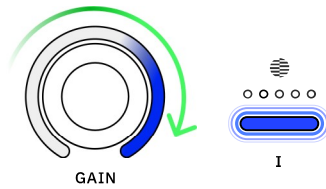

You'll know the device is in **Pairing Mode** when the **GAIN** LED ring illuminates in a clockwise direction, and **Footswitch I's** LED starts blinking slowly.



Step 6: Once your Nano Cortex is detected, the app will finalize the pairing process. After pairing is complete, the app will display the current configuration of your Nano Cortex.


Your Nano Cortex is now connected to the Cortex Cloud app.

Pairing additional Nano Cortex units (optional)

If you want to pair additional Nano Cortex units to the Cortex Cloud app, repeat the pairing process:

Step 1: Go to the '**Devices**' menu and tap **Add New**.

Step 2: Put the additional Nano Cortex into **Pairing Mode** by pressing and holding the **EXIT** and **CAPTURE** buttons simultaneously for 1 second.

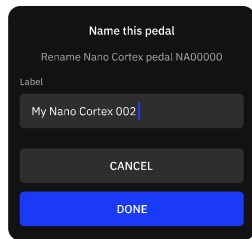

Step 3: Once paired, you can rename each Nano Cortex for easy identification in the app.



The app will finalize the pairing process and display the current configuration.

Next steps

With your Nano Cortex paired with the Cortex Cloud app, you can now take full advantage of its features.

For more in-depth information on managing your Nano Cortex through the Cortex Cloud app, explore our guides on [using the Cortex Cloud app](#), [updating your Nano Cortex](#), and [creating and managing Presets](#).

If you have any questions or need assistance, our support team is always here to help. You can contact us by emailing support@neuraldsp.com.

Guides for getting started with Nano Cortex

- [Nano Cortex quick start guide](#)
- [Connecting your gear to Nano Cortex](#)
- **Bluetooth pairing guide for Nano Cortex**
- [Using the Cortex Cloud app with Nano Cortex](#)
- [How to create a Neural Capture on Nano Cortex](#)
- [Creating and managing presets on Nano Cortex](#)
- [Using Nano Cortex as an audio interface](#)
- [Reamping on Nano Cortex](#)
- [Updating your Nano Cortex](#)
- [Using MIDI on Nano Cortex](#)
- [Nano Cortex DAW templates](#)